

# Cleanhandle

## The Automatic Door Handle Sanitizer

### User Manual

(English)

[www.cleanhandle.se](http://www.cleanhandle.se)

**Clean Handle** is the automatic door handle sanitizer designed to minimise spread of harmful germs in a range of environments.

## Contents

1. Door types
2. Positioning
3. Inserting batteries
4. Inserting Aerosol
5. LED signals
6. Specifications

# 1. Door types

The Clean Handle device is mounted with the use of adhesive pads. On most door surfaces the device can be completely removed without leaving any mark. However, if the door surface is of delicate material, i.e. exclusive wood, Clean Handle cannot guarantee that removal of the device will not result in marks on the door.

Before applying the device to the door ensure that the surfaces are clean, dry and unobstructed. Also check that the Clean Handle is compatible with the door handle by holding the device into approximate position.

On mirror doors you may need to complement with extension pads.

## 2. Positioning

Find the optimal position of the device by holding it against the door with the door handle centred between the spray nozzles. Make sure that the door handle is unobstructed by the device. Use a pencil to mark the lateral and vertical position of the device.

### **Remove the protective film**

Keeping the wall mount attached to the device, remove the protective film from the adhesive pads.

### **Fastening**

Use the markings from the previous step to carefully position the device. Hold it firmly pressed against the door for five seconds.

### 3. Inserting batteries

**Step 1:** Open the top lid and pull the safety lock outwards from the door (illus. 1).



**Step 2:** Open the battery holder and insert four AA-batteries with the minus poles pointing towards the coils. Close the battery lid.

**Step 3:** Reattach the device on the wall mount. Make sure it clicks into position.

## 4. Inserting aerosol

**Note!** The device is only compatible with Clean Handle's Aerosol capsules.

**Step 1:** Open the top lid. Hold the aerosol capsule with the bottom up and insert the capsule into the device (illus. 2).



**Step 2:** Gently press the capsule and pull the yellow lever over the bottom of the capsule (illus. 3).



The device will automatically calibrate and be ready for use.

## 5. LED signals

### Function panel

**Batteries:** When the batteries need changing this is indicated by a LED light next to the text LOW BATTERY on the device function panel (illus. 4).


**Spray:** When the aerosol needs changing this is indicated by a LED light next to the text LOW SPRAY on the device function panel.

### Front LED

The LED lights on the device casing activates 3 seconds before spray.



*Illustration 4*

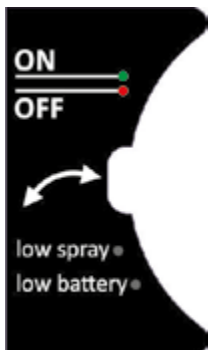

## 6. Specifications

**Art. No.** CH1\_17

**Batteries:** 4 AA-batteries

**Material and coating:**  
Anodized aluminium and plastic

**Measurements:** Height 315mm, Width 58mm, Depth 45mm

**Media:** Clean Handle Aerosol 75ml

**Pressure:** 2,50 bar

**Spray rate:** 0,7g/s

**Spray consumption:**  
Approx. 550 sprays per capsule.

**Warranty:** One year warranty from purchase date.

**Support:**  
[support@cleanhandle.se](mailto:support@cleanhandle.se)